



# BeoCom 1401

## RINGING SIGNAL

BeoCom 1401 has 10 different settings of the ringing signal, combined from 3 levels and 3 melodies, and the tone ringer disconnected.

	Low	Medium	High
Slow	1	2	3
Normal	4	5	6
Fast	7	8	9
Disconnected	0		

## SETTING THE RINGING SIGNAL

Press **Enter**  
 Press **#**  
 Press **0-9** to select the setting of your choice.  
 Press **Enter**

When the ringing signal is disconnected (setting **0**), it is automatically reconnected the first time you lift off the handset and place it in the base again.

## ADJUSTING THE VOLUME

During a call, you can adjust the handset volume in 5 steps by pressing the **+** and **-** buttons. All calls start at the medium volume level.

Press **+** to increase the volume.  
 Press **-** to decrease the volume.

## REDIALING

Press **Rdl** to call the last number called.

Telephone numbers exceeding 31 digits cannot be redialed.

In order to ensure that the last number is stored and can be redialed, the handset must be placed in the base (or press the switch off key on the lower side of the handset) for at least 1 second.

## MICROPHONE

Press **Ⓜ** to mute the microphone. A beep signal in the handset indicates that the microphone is muted.

Press **Ⓜ** to connect the microphone.

Please note! Pressing other keys one or two times will connect the microphone as well.

## MEMORY

BeoCom 1401 memorizes 10 telephone numbers which can be stored under the code numbers from 0 to 9.

Numbers of up to 21 digits can be memorized.

## PLEASE NOTE!

If the telephone is disconnected from the line for more than 1 hour, numbers stored in the memory may be erased. This may also happen when using a computer modem or another telephone on the same line.

## STORING PHONE NUMBERS

Press **Enter**  
 Press **Mem**  
 Enter the code number (**0-9**)  
 Enter the phone number  
 Press **Enter**

## DIALING A STORED NUMBER

Press **Mem**  
 Enter the code number (**0-9**)

## DELETING A STORED NUMBER

A stored number is deleted by storing a new number under the same code number.

## WALL HOLDER

The package contains a wall holder that consists of one faceplate which holds the handset and a choice of two backplates which attach to the wall.

The wider backplate is designed to fit over the wall phone jack. It will slide down and snap into place over the pegs on the wall phone jack.

There are tabs inside this backplate that allow for excess cord to be wrapped inside the backplate. If you wrap the cord clockwise then lead the cord out in the bottom left channel of the holder and if you wrap the cord counterclockwise, then lead the cord out in the bottom right channel.

The faceplate will then slide down and lock into place over the clips on the backplate.

The narrow backplate is designed to be screwed into the wall if no wall phone jack is available. Please see the enclosed instructions for details.

## ACCESSORIES

### THE TABLE BASE

The table base has 4 rubber feet. Each foot can be tipped up which allows the cord to be led out in the direction of your choice.

The cover plate can be tilted to rest on the tabletop. Under the cover plate there is a note pad and a directory for your stored phone numbers.

### PLACEMENT AND CLEANING

Do not place the telephone in very dusty or dirty surroundings. Do not expose it to excessive moisture.

Clean the telephone with a soft, damp cloth dipped in water mixed with a few drops of mild detergent.

### TECHNICAL SPECIFICATIONS

Power supply	from the telephone network
Ambient temperatures	-25°C - +55°C
Relative humidity	15% - 95%

Visit our website on:  
[www.bang-olufsen.com](http://www.bang-olufsen.com)

## INDUSTRY CANADA WARNINGS

### Notice:

The Industry Canada Label identifies certified equipment. This certification means that the equipment meets telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

**Caution:** Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

**Notice:** The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Number of all the devices does not exceed 5.

If you have any doubts or questions concerning the telephone, please do not hesitate to contact your retailer.

**Hearing aid Compatibility:  
This telephone  
IS HEARING AID COMPATIBLE**

# BeoCom 1401

