

Beo4

Lexicon of extra buttons

Lexicon ...

2D For activating the 2D function.

3D For activating the 3D function.

A

A-A.AUX For selecting AV and then A.AUX.

A-APPLE For selecting AV and then APPLETV.

A.AUX (audio auxiliary source) For switching on any extra equipment connected to your Bang & Olufsen audio system.

ADD? Appears as an option in the Beo4 setup mode. Enables you to add extra "buttons" to the Beo4 display.

A-DOCK For future use.

A-DTV2 For selecting AV and then DTV2.

A-DVD2 (AV video recorder 2) For selecting AV and then DVD2.

A.MEDIA For selecting AV and then MEDIA.

A.MEM (audio recorder) Appears in the display when you press the Beo4 A.MEM button. Any operation you carry out on Beo4 will be directed to your Bang & Olufsen audio recorder.

A.MEM2 For switching on a second audio recorder connected to your Bang & Olufsen audio system.

A-NET For future use.

A-N.MUS (AV Net music) For selecting AV and then N.MUSIC.

A-N.RA (AV Net radio) For selecting AV and then N.RADIO.

A.OPT (audio option) For programming a system setup for audio systems.

A-PC (AV PC) For selecting AV and then PC.

APPLETV For activation of Apple TV. The connected Apple TV must be registered to APPLETV or V.AUX2, if APPLETV is not available in the TV menu.

A.SERVR For future use.

A.SETUP (audio setup) Gives access to a list of extra "buttons" required for sound adjustment of certain Bang & Olufsen audio systems. **A.SETUP** must be added in order to be able to reveal the following »buttons« for sound adjustment:

BASS – gives access to adjusting Bass levels for an audio system, [refer to BASS for further information](#).

TREBLE – gives access to adjusting Treble levels for an audio system, [refer to TREBLE for further information](#).

LOUDNSS (loudness) – gives access to setting Loudness to On or Off, [refer to LOUDNSS for further information](#).

A-USB For future use.

A-USB2 For future use.

AV Indicates that the audio/video function is activated, transferring, for example, TV sound to the speakers connected to an audio system or vice versa. This only applies if your Video and Audio systems are interconnected.

AV? For configuring AV settings. [Refer to AV](#).

A-V.AUX (AV V.AUX) For selecting AV and then V.AUX.

A-WEB For future use.

>> *Lexicon ...*

B

BASS For sound adjustment of bass levels in certain Bang & Olufsen systems. In order to get access to BASS you must add either [A.SETUP](#) or [V.SETUP](#) as appropriate.

BATTERY Indicates that it is time to change the batteries in the Beo4 remote control.

BOOK For 'bookmarking' tracks, albums, etc. in connection with music services. Used for the 'starred' function of Spotify.

C

CAMERA (Camcorder) For selection of Camcorder input on Bang & Olufsen video systems.

CD (compact disc player) Appears in the display when you press the Beo4 CD button. Any operation you carry out on the Beo4 will be directed to your Bang & Olufsen CD player.

CLEAR For clearing program numbers on recent Bang & Olufsen TV sets.

In order to get access to **CLEAR**, [V.SETUP](#) must be added first.

CLOCK Displays the time on certain Bang & Olufsen products. Refer to the relevant User Guide for further information.

CONTROL? For configuring control of windows, curtains etc. [Refer to CONTROL.](#)

CONFIG? Enables you to program a dedicated product setup for Beo4.

CONTROL Used to control non-Bang & Olufsen products, e.g. windows, curtains etc.

COUNTER (counter position) Allows you to find a specific counter position on a video tape. Press LIST repeatedly to bring up **COUNTER** in the Beo4 display and then enter the appropriate counter position using the number buttons.

D

DOCK For activating a source connected via a dock, for example BeoSound 8.

DTV (Digital TV) Appears in the display when you press the Beo4 DTV button. Any operation you carry out on Beo4 will operate your Bang & Olufsen digital TV source.

DTV2 For switching on any extra video equipment connected to your Bang & Olufsen video system. Press the centre button.

DVD (digital versatile disc and Blu-ray) Appears in the display when you press the Beo4 DVD button. Any operation you carry out on Beo4 will be directed to your DVD player.

DVD2 (a second DVD player or video recorder) For switching on a second video recorder connected to your Bang & Olufsen video system.

E

EDIT Used for playback of a preprogrammed sequence of CD tracks on BeoSound 9000.

F

FORMAT (picture format) For optimising the picture format on a Bang & Olufsen video system. Refer to the relevant User Guide for further information.

G

GAME Used when playing games using the television as monitor. **GAME** minimises the delay caused by signal processing.

>> *Lexicon ...*

H

H.MEDIA For activating the HomeMedia feature.

I

INDEX (Teletext index page) Brings up the Teletext index page (p.100). Add **INDEX** to the Beo4 list of functions. Access Teletext by pressing TEXT and press LIST repeatedly to bring up **INDEX** in the Beo4 display and press the centre button to bring up the page.

J

JOIN Is a Master Link function. Press LIST repeatedly to bring up **JOIN** in the Beo4 display. You are connected to the active source in the system. In standby mode radio will be used as source.

L

LAMP (lamp light control) For switching on a particular lamp in your light setup – requires the installation of a Bang & Olufsen light control unit. Press LIST repeatedly to bring up **LAMP** in the Beo4 display, add the “button” if it is not already available, then enter the appropriate number for a lamp (1 – 9).

LARGE (Teletext: Large) Used on certain Bang & Olufsen TVs for enlarging the Teletext page you are watching. Access Teletext, then press LIST repeatedly to bring up **LARGE** in the Beo4 display and press the centre button to enlarge part of the page. Press the centre button to enlarge the second half of the page and press the centre button to return to normal Teletext page size.

L-A.AUX For selecting LINK and then A.AUX.

L-APPLE For selecting LINK and then APPLETV.

L-DOCK For future use.

L-DTV2 For selecting LINK and then DTV2.

L-DVD2 (link second DVD player or video recorder) For selecting **LINK** and then **DVD2**.

L-H.MED For selecting H.MEDIA in a link room.

LIGHT (light control) Appears in the display when you press the Beo4 LIGHT button. Any operation you carry out on Beo4 will be directed towards your Bang & Olufsen light control(s).

LIGHT? For configuring light settings. [Refer to LIGHT.](#)

LINK Must be used where the use of a LINK button is normally specified. **LINK** must be added to your Beo4 to achieve the following:

1. If it is desired that a decoder in the main room can be accessed from a video link room.
2. If the same source is available in both link and main room, e.g. if access is desired in the link room to a video recorder in the main room instead of the video recorder present in the link room.
3. If a link room product, e.g. BeoLab 3500 or a second television, is placed in the same room as a main room product in Option 4.

LINK-AV (link audio/video) Used to obtain stereo sound from your main Bang & Olufsen video system in a link room with a secondary video source, usually TV. The function is useful when a TV decoder is connected to the main video system. Add it to the Beo4 list of functions, press LIST to reveal **LINK-AV** and then press TV to do so.

L-MEDIA For selecting MEDIA in a link room.

L-NET For future use.

L-N.MUS For selecting N.MUSIC in a link room.

>> *Lexicon ...*

L-N.RA For selecting N.RADIO in a link room.

L.OPT (link option) For programming a system setup for link room products. Use **L.OPT** for programming a link option.

LOUDNSS (loudness) For switching the loudness function on/off in certain Bang & Olufsen systems. **LOUDNSS** is only available if [A.SETUP](#) or [V.SETUP](#) has been added. The loudness function compensates for the human ear's lack of sensitivity to high and low bass and treble levels when listening to low volume levels. Press LIST repeatedly to bring up **LOUDNSS** in the Beo4 display and then press the centre button repeatedly to set loudness to on or off. If you wish to store your adjustment, [refer to S.STORE \(Sound Store\) for further information](#).

L-PC (Link PC) For selecting PC in a link room.

L-SERVR For future use.

L-USB For future use.

L-USB2 For future use.

L-V.AUX (Link V.AUX) Used in some situations to distribute the set-top box signal to the link room.

L-WEB For future use.

L-W.MED For selecting W.MEDIA in a link room.

M

MEDIA For activating the HomeMedia menu.

MIX (Teletext: Mix) Used on certain Bang & Olufsen TVs to superimpose the Teletext page on the TV picture. Access Teletext, press LIST repeatedly to bring up **MIX** in the Beo4 display and then press the centre button.

MODE? For setting the Beo4 to the correct mode depending on the setup.

MODE 1 (with navigation button)

MODE 2 (without navigation button)

MOTS (More Of The Same) Used to activate MOTS on an audio product.

MOVE? Appears as an option in the Beo4 setup mode, Enables you to rearrange the order in which the extra "buttons" in the Beo4 display appear.

N

NET Activates a DLNA source in your system.

N.MUSIC (Net music) For playing music tracks in mp3 and wma format. Any operation you carry out on Beo4 will be directed to your N.MUSIC player, e.g. BeoSound 5.

N.RADIO (Net radio) For access to Internet radio. Any operation you carry out on Beo4 will be directed to your N.RADIO player, e.g. BeoSound 5.

O

OPTION? (Option programming)

V.OPT (video option)

A.OPT (audio option)

L.OPT (link option)

>> *Lexicon ...*

P

PAGE (Teletext page selection) For selecting Teletext pages on certain Bang & Olufsen TVs (where pressing GO TO is normally required for access or page selection).

PC For switching on any extra video equipment connected to your Bang & Olufsen video system. Press the centre button.

P-AND-P (picture-and-picture) For operating the picture-and-picture function on certain Bang & Olufsen TVs. Press, for example, the TV button to bring up the source TV in the picture to the right.

P-APPLE For showing Apple tv in the picture to the right. [Refer to P-AND-P.](#)

P-DTV2 For showing DTV2 in the picture to the right. [Refer to P-AND-P.](#)

P-DVD2 (picture-and-picture video recorder 2) For showing DVD2 in the picture to the right.

P-H.MED For showing H.MEDIA in the picture to the right. [Refer to P-AND-P.](#)

PICTURE For operating the various functions related to the PICTURE button on other recent Bang & Olufsen remote controls. In older video systems, it may relate to functions such as motorised stand, picture-and-picture, as well as picture adjustment. [V.SETUP](#) must be added to be able to access **PICTURE**.

On recent televisions, **PICTURE** is used to select picture modes.

PLAY Start playback of a DVD, recording etc.

P-MEDIA For showing MEDIA in the picture to the right. [Refer to P-AND-P.](#)

P.MUTE (picture mute) Switches the picture on or off. Press LIST and \blacktriangle or \blacktriangledown to select **P.MUTE** and press the centre button to change the setting. Only available on some televisions.

P-PC (picture-and-picture PC) For showing PC in the picture to the right.

P-V.AUX (picture-and-picture V.AUX) For showing the source connected to the V.AUX socket in the picture to the right.

P-WEB For future use.

P-W.MED For showing W.MEDIA in the picture to the right. [Refer to P-AND-P.](#)

R

RADIO Appears in the display when you press the Beo4 RADIO button. Any operation you carry out on Beo4 will be directed to your Bang & Olufsen radio.

RANDOM (random play) For switching on the random order playback function in recent Bang & Olufsen CD players. With **RANDOM** in the display, press the centre button.

RECORD Starts a recording on a Bang & Olufsen audio or video recorder. Available in the LIST menu.

RECORD2 (recording A.MEM2 or DVD2) Should be added when you connect a second video recorder to your video system. Starts a recording on a second Bang & Olufsen audio or video recorder. Press the centre button twice to start recording.

REMOVE? Appears when you have accessed the Beo4 setup mode. Enables you to remove extra "buttons" from the Beo4 display.

REPEAT (repeated play) For switching on the repeated playback function in some Bang & Olufsen CD players, for example BeoSound 9000. With **REPEAT** in the display, press the centre button.

RESET For resetting picture or sound adjustments to their preset levels. Press the centre button. Available in the LIST menu.

RESET? For resetting the product to default.

>> *Lexicon ...*

RETURN (record return) For operating the record return function in certain Bang & Olufsen tape recorders. To return to where a recording started, press the centre button.

REVEAL (Teletext reveal) For revealing concealed Teletext information in Bang & Olufsen TVs.

S

SELECT Is used for programming a sequence of compact discs for playback on BeoSound 9000.

SERVER For future use.

SETUP For setting up the LC 2 Light Control.

SHIFT For operating certain functions related to set-top box operation in a link room. Certain other functions may also require that **SHIFT** is displayed first.

SIZE For future use.

SLEEP For setting a sleep timer on the television using Beo4. Press LIST repeatedly to bring up **SLEEP** in the Beo4 display and press the centre button repeatedly to set different sleep timers.

SOUND (mono/stereo sound/language) For switching between the types of sound (mono/ stereo/language) currently available on a Radio-, TV-, or digital TV programme. Press the centre button repeatedly.

On recent televisions, **SOUND** is used to select sound modes.

SP.DEMO (speaker demo) For making a speaker demonstration on the system in question. Press the centre button.

SPEAKER (loudspeakers) For selecting the number of loudspeakers you want – in a Bang & Olufsen surround sound setup. Press 1 – 5.

S.STORE (sound store) For storing sound adjustment settings. **S.STORE** is only available if [V.SETUP](#) or [A.SETUP](#) has been added.

STAND For turning certain Bang & Olufsen video systems on their motorised stands.

STORE For storing TV programs/picture adjustment settings ([Refer to V. SETUP](#)) and favourite Teletext pages (memory pages). For storing Bang & Olufsen light setups ([Refer to LIGHT](#)). Press the centre button, enter the appropriate number, and then press the centre button again.

SUBCODE (Teletext subcode) For operating the Teletext subpage function in certain Bang & Olufsen TVs.

T

TEXT (Teletext) Appears in the display when you press the Beo4 TEXT button. Any operation you carry out on Beo4 will operate the Teletext function (if Teletext is available) on the TV program you are currently watching.

TRACK For selecting individual CD tracks on BeoSound 9000.

TRACKNG (tracking) For instant tracking adjustment of the video tape you are watching.

TREBLE For sound adjustment of treble tone in certain Bang & Olufsen systems. TREBLE is only available if [A.SETUP](#) or [V.SETUP](#) has been added. If you wish to store your adjustment, [refer to S.STORE \(Sound Store\) for further information](#).

TUNE (tuning in a station) For tuning in stations on certain Bang & Olufsen TVs. **TUNE** is only available if [V.SETUP](#) has been added.

TURN For turning the tape in certain Bang & Olufsen audio tape recorders – to play the other side. On certain Bang & Olufsen video tape recorders **TURN** is also used for input selection of Cam-corder in record pause mode. Press the centre button.

>> *Lexicon ...*

TV Appears in the display when you press the Beo4 TV button. Any operation you carry out on the Beo4 will be directed to your Bang & Olufsen TV.

U

UPDATE (Teletext update) For operating the Teletext update function in Bang & Olufsen TVs.

Press the centre button. Repeat the operation to see the page when it has been updated.

USB Used to select source input connected via USB.

USB2 For future use.

V

V.AUX (auxiliary video source) For switching on any extra video equipment connected to your Bang & Olufsen video system. Press the centre button.

V.AUX2 (second auxiliary video source) For switching on extra video equipment connected to your Bang & Olufsen video system.

VIDEO? For selecting a dedicated video product setup for Beo4.

VIDEO5

VIDEO6

V.MEM (video recorder) Appears in the display when you press the Beo4 VMEM button. Any operation you carry out on Beo4 will be directed to your Bang & Olufsen video recorder.

V.OPT (video option) For programming a system setup for video products.

V.SETUP (video setup) Gives access to a list of extra "buttons" that are required for the setting up of certain Bang & Olufsen video products.

STORE For storing an adjustment or a preset value, [refer to STORE for further information.](#)

BASS Sound adjustment of bass tone, [refer to BASS for further information.](#)

TREBLE Sound adjustment of treble tone, [refer to TREBLE for further information.](#)

LOUDNSS (loudness) Sound adjustment – switching the loudness function on or off, [refer to LOUDNSS for further information.](#)

W

WEB For future use.

W.MEDIA For activating the WebMedia feature.

Z

ZONE Set your Beo4 to a zone, i.e. decide which product should activate video and audio sources.

ALL One Beo4 in each room.

VIDEO More than one Beo4 in a room.

AUDIO More than one Beo4 in a room.

LINK For products set to Option 4.