

# Beo4

Lexicon of extra buttons

**NOTE!** "Buttons" marked with an \* apply only to previous versions of the Beo4 remote control.

## A

**A.AUX (audio auxiliary source)** For switching on any extra equipment connected to your Bang & Olufsen audio system.

**ADD?** Appears as an option in the Beo4 *setup mode*. Enables you to add extra "buttons" to the Beo4 display. Access the Beo4 *setup mode* and call up **ADD?**, press GO and start to reveal the "buttons" you can add – press GO to add the "button" currently displayed as the first extra "button" when you press LIST – or press e.g. 3 to place it as number 3 in the list of all your extra "buttons".

**A-DVD2 (A-V.TP2\*) (AV video recorder 2)** For selecting AV and then DVD2 (V.TAPE2\*).

**A.MEM (A.TAPE\*) (audio recorder)** Appears in the display when you press the Beo4 AMEM (ATAPE\*) button. Any operation you carry out on the Beo4 will be directed to your Bang & Olufsen audio recorder.

**A.MEM2 (A.TAPE2\*) (audio recorder 2)** For switching on a second audio recorder connected to your Bang & Olufsen audio system.

**A-N.MUS (AV Net music)** For selecting AV and then N.MUSIC.

**A.OPT (audio option)** For programming a system setup for audio systems. Please refer to **OPTION?** for a further explanation.

**A.SETUP (audio setup)** Gives access to a list of extra "buttons" required for sound adjustment of certain Bang & Olufsen audio systems, **A.SETUP** must be added in order to be able to reveal the following »buttons« for sound adjustment:

**BASS** – gives access to adjusting Bass levels for an audio system.

**TREBLE** – gives access to adjusting Treble levels for an audio system.

**LOUDNSS (loudness)** – gives access to setting Loudness to On or Off, please refer to **LOUDNSS** for further information.

**S.STORE (Sound Store)** – gives access to storing sound adjustments, please see **S.STORE** for further information.

**A.TAPE\* (audio tape recorder)** Appears in the display when you press the Beo4 A TAPE\* button. Any operation you carry out on the Beo4 will be directed to your Bang & Olufsen audio tape recorder.

**A.TAPE2\* (audio tape recorder 2)** For switching on a second audio tape recorder connected to your Bang & Olufsen audio system.

**AUDIO?** For selecting an *Audio* product setup for Beo4. Product setups **AUDIO1** and **AUDIO2** are available.

**AUDIO1** For selecting an *Audio* product setup for Beo4. **AUDIO1** supports all Bang & Olufsen audio systems other than BeoSound 9000.

**AUDIO2** For selecting an *Audio* product setup for Beo4. **AUDIO2** supports BeoSound 9000.

**AV** Indicates that the audio/video function is activated, transferring e.g. TV sound to the speakers connected to an audio system or vice versa. This only applies if your Video and Audio systems are interconnected.

**AVANT** Indicates the Beo4 *Video* product setup dedicated to BeoVision Avant.

**AVANTUS** Indicates the Beo4 *Video* product setup dedicated to the US version of BeoVision Avant.

**A-V.AUX (AV V.AUX)** For selecting AV and then V.AUX.

**AV-N.RA (AV Net radio)** For selecting AV and then N.RADIO.

**AV-PC (AV PC)** For selecting AV and then PC.

**A-V.TP2\* (AV video tape recorder 2)** For selecting AV and then V.TAPE2\*.

**AV5** Indicates the Beo4 *Video* product setup dedicated to BeoCenter AV 5.

**AV9000** Indicates the Beo4 *Video* product setup dedicated to BeoSystem AV 9000.

## B

**BASIC** Indicates the Beo4 *Audio* product setup for all Bang & Olufsen audio systems other than BeoSound 9000.

**BASS** For sound adjustment of bass levels in certain Bang & Olufsen systems. In order to get access to **BASS** you must add either **A.SETUP** or **V.SETUP** as appropriate. If you wish to store sound adjustments, refer to **S.STORE (Sound Store)** for further information.

**BATTERY** Indicates that it is time to change the batteries in the Beo4 remote control.

**BC1** Indicates the Beo4 *Video* product setup dedicated to BeoCenter 1.

**BS9000** Indicates the Beo4 *Audio* product setup dedicated to BeoSound 9000.

**BV1** Indicates the Beo4 *Video* product setup dedicated to BeoVision 1.

## C

**CAMERA (CAMCORD\*) (Camcorder)** For selection of CamCorder input on Bang & Olufsen video systems.

**CD (compact disc player)** Appears in the display when you press the Beo4 CD button. Any operation you carry out on the Beo4 will be directed to your Bang & Olufsen CD player.

**CD2\* (compact disc player 2)** For switching on a second CD player in certain Bang & Olufsen audio systems.

**CDV (compact disc video player)** For switching on a compact disc video player connected to your Bang & Olufsen video system.

**CLEAR** For clearing program numbers on recent Bang & Olufsen TV sets. In order to get access to **CLEAR**, **V.SETUP** must be added first.

**CLOCK** Displays the time on certain Bang & Olufsen products. Please refer to the appropriate User's guide for the product in question for further information.

**CONFIG?** Enables you to programme a dedicated product setup for Beo4. You can select product setups for video and audio products.

**COUNTER (counter position)** Allows you to find a specific counter position on a video tape. Press LIST repeatedly to reveal **COUNTER** and then just key in the appropriate counter position using the number keys.

## D

**DOORCAM\* (Door camera)** For special Bang & Olufsen applications.

**DTV (SAT\*) (Digital TV)** Appears in the display when you press the Beo4 DTV (SAT\*) button. Any operation you carry out on Beo4 will operate your Bang & Olufsen digital TV source.

**DVD (digital versatile disc)** Appears in the display when you press the Beo4 DVD button. Any operation you carry out on Beo4 will be directed to your DVD player.

**DVD2 (V.TAPE2\*) (a second DVD player or video recorder)** For switching on a second video recorder connected to your Bang & Olufsen video system. Press GO to do so.

## E

**EDIT** Used for playback of a preprogrammed sequence of CD tracks on BeoSound 9000.

## F

**FORMAT (picture format)** For optimising the picture format on a Bang & Olufsen widescreen video system. Please refer to the relevant User's guide for further information.

## I

**INDEX (Teletext index page)** Calls up the Teletext index page (p.100). Add **INDEX** to the Beo4 list of functions. Access Teletext by pressing TEXT and press LIST repeatedly to reveal **INDEX** and press GO to call up the page.

**L**

**LAMP (lamp light control)** For switching on a particular lamp in your light setup – requires the installation of a Bang & Olufsen light control unit. Press LIST to reveal **LAMP**, add the “button” if it is not already available, then key in the appropriate number for a lamp (1 – 9).

**LARGE (Teletext: Large)** Used on certain Bang & Olufsen TVs for enlarging the Teletext page you are watching. Access Teletext, then press LIST repeatedly to display **LARGE** and press GO to enlarge part of the page. Press GO to enlarge the second half of the page and press GO to return the page to normal Teletext page size.

**L-DVD2 (link second DVD player or video recorder)** For selecting **LINK** and then **DVD2**.

**LIGHT (light control)** Appears in the display when you press the Beo4 LIGHT button. Any operation you carry out on the Beo4 will be directed towards your Bang & Olufsen light control(s).

**LINK** Must be used where the use of a LINK button is normally specified. **LINK** must be added to your Beo4 to achieve the following:

1. If it is desired that a decoder in the main room can be accessed from a video link room, e.g. display **LINK** in the Beo4 display and then press TV to do so.
2. If the same source is available in both link and main room, e.g. if access is desired in the link room to a video recorder in the main room instead of the video recorder present in the link room, display **LINK** in the Beo4 display and then press VMEM (VTAPE\*) to do so.
3. If a link room product, e.g. BeoLab 3500, is placed in the same room as a main room product, e.g. Avant and Overture (Option 4).
4. For compatibility setups, where e.g. an X-tra speaker kit is placed in a link room together with a TV, or, where e.g. an X-tra TV kit is placed in a link room together with an old Bang & Olufsen TV, e.g. a LX2802 TV. To activate any link setups, display **LINK** on Beo4 and then press the appropriate source button – TV, RADIO, CD, AMEM (ATAPE\*), VMEM (VTAPE\*).

**LINK-AV (link audio/video)** Used to obtain stereo sound from your main Bang & Olufsen video system in a link room with a secondary video source, usually TV. The function is useful when a TV decoder is connected to the main video system. Add it to the Beo4 list of functions, press LIST to reveal **LINK-AV** and then press TV to do so.

**L-N.MUS** For selecting N.MUSIC in a link room.

**L-N.RA** For selecting N.RADIO in a link room.

**L.OPT (link option)** For programming a system setup for link room products. Use **L.OPT** for programming a link option. Refer to **OPTION?** for further information.

**LOUDNSS (loudness)** For switching the loudness function on/off in certain Bang & Olufsen systems. **LOUDNSS** is only available if **A.SETUP** or **V.SETUP** has been added. The loudness function compensates for the human ear’s diminished sensitivity to high and low bass and treble levels when listening to low volume levels. Press LIST to reveal **LOUDNSS** and then press GO repeatedly to set loudness to on or off. If you wish to store your adjustment, refer to **S.STORE (Sound Store)** for further information.

**L-PC (Link PC)** For selecting **LINK** and then **PC**.

**L-PHONO\* (link PHONO)** For selecting **LINK** and then **PHONO**.

**L-V.AUX (Link V.AUX)** Used in some situations to distribute the set-top box signal to the link room.

**L-V.TP2\* (link video tape recorder 2)** For selecting **LINK** and then **V.TAPE2\***.

**M**

**MIX (Teletext: Mix)** Used on certain Bang & Olufsen TVs to superimpose the Teletext page on the TV picture. Access Teletext, press LIST repeatedly to reveal **MIX** and then press GO.

**MOVE?** Appears as an option in the Beo4 **setup mode**. Enables you to rearrange the order in which the extra “buttons” in the Beo4 display appear. Access the Beo4 setup mode and call up **MOVE?**, press GO and start to reveal the “buttons” you can move – press GO to move the “button” currently displayed as the first extra “button” when you press LIST – or press e.g. 3 to place it as number 3 in the list of all your extra “buttons”.

**MX** Indicates the Beo4 **Video** product setup dedicated to BeoVision MX. The MX product setup should also be used for older versions of BeoVision MX TVs and other older Bang & Olufsen video systems. In order to tune and preset such older systems, you must first add **V.SETUP**.

**N**

**NONE** Indicates the Beo4 **Video** product setup **NONE**. Used if you want to program a Beo4 with an **Audio** product setup only – without including Video list functions.

**N.MUSIC (Net music)** For playing music tracks in mp3 and wma format stored on a connected PC. Press GO to do so. While **N.MUSIC** is displayed, and a track is playing, you may press ▲ or ▼ to step through tracks; ◀ or ▶ to change to another playlist, and STOP and GO to pause and resume playback.

**N.RADIO (Net radio)** For access to Internet radio via a connected PC. Press GO to do so. While **N.RADIO** is displayed, and a track is playing, you may press ▲ or ▼ to step through tracks; ◀ or ▶ to change to another playlist, and STOP and GO to pause and resume playback.

**O**

**OPTION? (option programming)** Appears when you access the Beo4 setup mode (Press Standby and LIST, then press LIST repeatedly). Enables you to preprogramme a Bang & Olufsen system setup. Press GO, then LIST to display the type of option preprogramming you want to make:

**V.OPT (video option)**

**A.OPT (audio option)**

**L.OPT (link option)**

When the right option is displayed, key in the appropriate option number.

**P**

**PAGE (Teletext page selection)** For selecting Teletext pages on certain Bang & Olufsen TVs (where pressing GO TO is normally required for access). Key in the page number you want, or press ▲ or ▼

**PC** Select **PC** in order to use Beo4 to adjust the sound from a Personal Computer connected to your Bang & Olufsen BeoLink system.

**P-DVD2 (P-V.TP2\*) (picture-and-picture video recorder 2)** For showing DVD2 (V.TAPE2\*) in the picture to the right.

**PHONO\* (record player)** For switching on a Bang & Olufsen record player. Press GO to do so. While PHONO is displayed, and the record is playing, you may press ▲ or ▼ to step through the music; and you may press STOP and GO to pause and resume playback.

**PICTURE** For operating the various functions related to the PICTURE button on other recent Bang & Olufsen remote controls. In older video systems, it may relate to functions such as motorised stand, picture-and-picture, as well as picture adjustment. **V.SETUP** must be added to be able to access **PICTURE**.

**P-AND-P (picture-and-picture)** For operating the picture-and-picture function on certain Bang & Olufsen TVs. Press, for example, the TV button to call up the source TV in the picture to the right.

**P.MUTE (picture mute)** Switches the picture on or off. Press LIST repeatedly to select P.MUTE and press GO to change the setting. Not available on some televisions.

**P-PC (picture-and-picture PC)** For showing PC in the picture to the right.

**P-V.AUX (picture-and-picture V.AUX)** For showing the source connected to the V.AUX socket in the picture to the right.

**P-V.AUX2 (picture-and-picture V.AUX2)** For showing the source registered as V.AUX2 in the picture to the right.

**P-V.TP2\* (picture-and-picture video tape recorder 2)** For showing V.TAPE2\* in the picture to the right.

## R

**RADIO** Appears in the display when you press the Beo4 RADIO button. Any operation you carry out on the Beo4 will be directed to your Bang & Olufsen Radio.

**RANDOM (random play)** For switching on the random order playback function in recent Bang & Olufsen CD players. With **RANDOM** in the display, press GO to do so.

**RECLOCK (Record lock)** For future use.

**RECORD2 (recording A.MEM2/A.TAPE2\* or DVD2/IV.TAPE2\*)** Should be added when you connect a second video recorder to your video system. Starts a recording on a second Bang & Olufsen audio or video recorder. Press GO twice to start recording.

**REMOVE?** Appears when you have accessed the Beo4 setup mode. Enables you to remove extra "buttons" from the Beo4 display. Access the Beo4 setup mode and call up **REMOVE?**, press GO and start to reveal the "buttons". Press GO to remove the "button" currently displayed.

**REPEAT (repeated play)** For switching on the repeated playback function in recent Bang & Olufsen CD players. With **REPEAT** in the display, press GO to do so.

**RESET** For resetting picture or sound adjustments to their preset levels. Press GO to do so.

**RETURN (record return)** For operating the record return function in certain Bang & Olufsen tape recorders. To return to where a recording started, press GO.

**REVEAL (Teletext reveal)** For revealing concealed Teletext information in Bang & Olufsen TVs. Press GO to do so.

## S

**SAT\* (Satellite)** Appears in the display when you press the Beo4 SAT\* button. Any operation you carry out on the Beo4 will operate your Bang & Olufsen Satellite program numbers.

**SELECT** Is used for programming a sequence of compact discs for playback on BeoSound 9000.

**SETUP** For setting up the LC 2 Light Control.

**SHIFT** For operating certain functions related set-top box operation in a link room. Certain other functions may also require that **SHIFT** is displayed first.

**SP.DEMO (speaker demo)** For making a speaker demonstration on the system in question. Press GO to do so.

**SOUND (mono/stereo sound/language)** For switching between the types of sound (mono/stereo/language) currently available on a Radio-, TV-, or digital TV programme; or for switching between the sound tracks on a video tape. Press GO repeatedly to do so.

**SPEAKER (loudspeakers)** For selecting the number of loudspeakers you want – in a Bang & Olufsen surround sound setup. Press 1 – 5 to do so. While **SPEAKER** is displayed, pressing ▲, ▼, ◀ or ▶ adjusts the loudspeaker balance.

**SRC.OPT (Source option)** For future use.

**S.STORE (sound store)** For storing sound adjustment settings. **S.STORE** is only available if **V.SETUP** or **A.SETUP** has been added.

**STAND** For turning certain Bang & Olufsen video systems on their motorized stands. Press ◀ or ▶ to do so; or key in a preset stand position.

**STORE** For storing TV programs/picture adjustment settings (see **V.SETUP**) and favourite Teletext pages (memory pages). For storing Bang & Olufsen light setups (see **LIGHT**). To do so, press GO, key in the appropriate number, and then press GO again.

**SUBCODE (Teletext subcode)** For operating the Teletext subpage function in certain Bang & Olufsen TVs.

## T

**TEXT (Teletext)** Appears in the display when you press the Beo4 TEXT button. Any operation you carry out on the Beo4 will operate the Teletext function (if Teletext is available) on the TV program you are currently watching.

**TRACK** For selecting individual CD tracks on BeoSound 9000.

**TRACKING (tracking)** For instant tracking adjustment of the video tape you are watching.

**TREBLE** For sound adjustment of treble tone in certain Bang & Olufsen systems. **TREBLE** is only available if **A.SETUP** or **V.SETUP** has been added. Press ▲ or ▼ to adjust as required. Refer to **S.STORE (sound store)** if you wish to store your adjustment.

**TUNE (tuning in a station)** For tuning in stations on certain Bang & Olufsen TVs. **TUNE** is only available if **V.SETUP** has been added.

**TURN** For turning the tape in certain Bang & Olufsen audio tape recorders – to play the other side. On certain Bang & Olufsen video tape recorders **TURN** is also used for input selection of Camcorder in record pause mode. Press GO to do so.

**TV** Appears in the display when you press the Beo4 TV button. Any operation you carry out on the Beo4 will be directed to your Bang & Olufsen TV.

## U

**UPDATE (Teletext update)** For operating the Teletext update function in Bang & Olufsen TVs. Press GO to do so. Repeat the operation to see the page when it has been updated.

## V

**V.AUX (auxiliary video source)** For switching on to any extra video equipment connected to your Bang & Olufsen video system. Press GO to do so.

**V.AUX2 (second auxiliary video source)** For switching on extra video equipment connected to your Bang & Olufsen video system and registered as V.AUX2.

**VIDEO?** For selecting a dedicated **Video** product setup for Beo4. Product setups **VIDEO1**, **VIDEO2** and **VIDEO3** are available.

**VIDEO1** For selecting a dedicated **Video** product setup for Beo4. **VIDEO1** supports, for example, BeoVision Avant, BeoVision 5, BeoVision 3 – 32-inch screen, BeoCenter AV 5, BeoCenter AV 9000 and earlier BeoVision MX models.

**VIDEO2** For selecting a dedicated **Video** product setup for Beo4. **VIDEO2** supports, for example, BeoVision 1, BeoVision MX 8000, BeoVision 1 Link and BeoCenter 1.

**VIDEO3** For selecting a dedicated **Video** product setup for Beo4. **VIDEO3** supports, for example, video products for the American and Taiwanese markets.

**V.MEM (V.TAPE\*) (video recorder)** Appears in the display when you press the Beo4 VMEM (VTAPE\*) button. Any operation you carry out on Beo4 will be directed to your Bang & Olufsen video recorder.

**V.OPT (video option)** For programming a system setup for video products. Refer to **OPTION?** for further information.

**V.SETUP (video setup)** Gives access to a list of extra "buttons" that are required for the setting up of certain Bang & Olufsen video products:

**TUNE** Used for tuning in stations, refer to **TUNE** for further information.

**PICTURE** Used for Picture adjustment, refer to **PICTURE** for further information.

**STORE** For storing an adjustment or a preset value, refer to **STORE** for further information.

**CLEAR** (clear program numbers) For clearing program numbers, refer to **CLEAR** for further information.

**BASS** Sound adjustment of bass tone, refer to **BASS** for further information.

**TREBLE** Sound adjustment of treble tone, refer to **TREBLE** for further information.

**LOUDNESS** (loudness) Sound adjustment – switching the loudness function on or off, refer to **LOUDNESS** for further information.

**S.STORE** (sound store) For storing sound adjustments, refer to **S.STORE** for further information.

**V.TAPE2\* (video tape recorder 2)** For switching on a second video tape recorder connected to your Bang & Olufsen video system. Press GO to do so.

Technical specifications, features and the use thereof  
are subject to change without notice.