

# BeoVision

New software – Supplement

# On-screen menus

Your television has been equipped with new software and possibly hardware. This results in new functions and features which are described in this supplement. The supplement only describes major differences compared to the Guide you originally received with your television.

The main changes in your television are in the on-screen menus and menu layout. However, new functions have also been added.

<b>TUNING</b>	<b>SOUND</b>
EDIT CHANNELS	ADJUSTMENT
ADD CHANNELS	SPEAKER TYPES
AUTO TUNING	SPEAKER ROLES
MANUAL TUNING	SPEAKER DISTANCE
MANUAL TUNING (EXTRA)	SPEAKER LEVEL
<b>PLAY TIMER</b>	SOUND SYSTEM
TIMER ON/OFF	<b>PICTURE</b>
PLAY TIMER INDEX	BRIGHTNESS
PLAY TIMER PROGRAMMING	CONTRAST
WAKE-UP TIMER	COLOUR
<b>OPTIONS</b>	TINT
CONNECTIONS	SIZE
AV1-AV6	<b>CLOCK</b>
DISPLAY 1	TIME
DISPLAY 2	DATE
HDMI EXPANDER	MONTH
LINK	YEAR
FREQUENCY	SYNCHRONISE
MODULATOR	<b>MENU LANGUAGE</b>
SOURCE*	DANSK
<b>TUNER SETUP</b>	DEUTSCH
TV TUNER	ENGLISH
DVB	ESPAÑOL
	FRANÇAIS
	ITALIANO
	NEDERLANDS
	SVENSKA
	<b>STAND POSITIONS</b>
	VIDEO
	AUDIO
	STANDBY
	STAND ADJUSTMENT

 
The extended on-screen menu system for the television. The greyed menu items indicate optional extras which may or may not be present in your system.

*\*SOURCE ... If you have disabled the TV tuner, select an available source to tune in a new link frequency.*

Your television has been updated and new features are available.

For general information about remote control operation, refer to the Guide enclosed with your remote control.


## Black menus

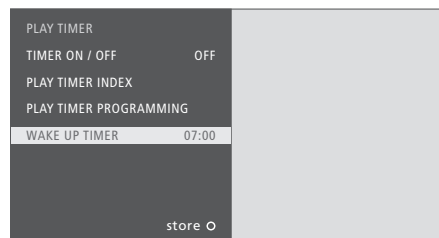

The menus in your television have changed colour and position. The menu background colour is black and the menus have moved from the centre to the left side of the screen.

Instead of black bars on each side of the menu, the television picture is shown to the right.

## Teletext menu bar

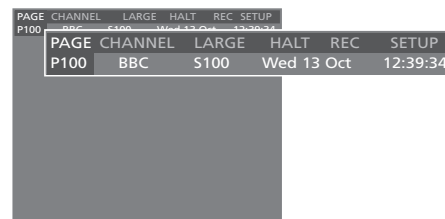 

To enlarge the teletext page ...

- > Press ◀ or ▶ to highlight LARGE.
- > Press GO repeatedly to switch between the upper half of the page, the lower half of the page and normal teletext page size.

*The menu bar no longer contains the option 'REVEAL'.*

## Standby options

Your standby options have changed compared to those mentioned in your Reference Book.

When you register a set-top box in the CONNECTIONS menu, you can select 'STANDBY OPTIONS' for your set-top box. This means that you can select if the connected set-top box should switch to standby automatically.

### *The options are:*

OFF AT SOURCE CHANGE ... The set-top box is switched on when selected, and off when another source is selected.

OFF AT TV STANDBY ... The set-top box is switched on when selected, and off when the television is switched off.

 
ALWAYS ON ... The set-top box is always on and never switched off.

MANUAL CONTROL ... The set-top box is not switched on and off automatically. You switch it on manually by means of the remote control.

## HDMI Expander

With the new software update, you have the possibility of adding additional HDMI sources. You can at any time enable or disable an HDMI Expander connected to the HDMI C socket.

If you set the HDMI EXPANDER in the CONNECTIONS menu to YES, the HDMI-C option in the AV menus is replaced with HDMI-C1, HDMI-C2, HDMI-C3, and HDMI-C4.

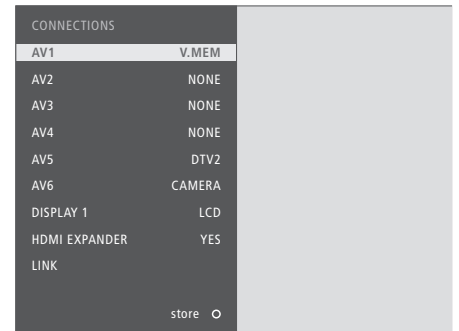

TIMER RECORDER is part of the AV menus. You can activate the Timer recording option for a connected recorder. Only available in the AV1 and AV2 menus, and can only be activated in one of these menus at any time.

*The source name V.AUX in the menu has changed to DTV2*

## Tuner setup

You may choose to disable either the TV tuner, the optional DVB tuner, or both. If you disable the TV tuner, you can activate a connected peripheral unit with the TV button. If you disable the DVB tuner, you can activate a connected peripheral unit with the DTV button.

### *To disable the internal tuner ...*

- > Press **TV** to switch on the television.
- > Press **MENU** to bring up the TV SETUP menu and press **▼** to highlight **OPTIONS**.
- > Press **GO** to bring up the **OPTIONS** menu, and press **▼** to highlight **TUNER SETUP**.
- > Press **GO** to bring up the **TUNER SETUP** menu, **TV TUNER** is already highlighted.
- > Press **◀** or **▶** to switch between the settings **ON** or **OFF**.
- > Press **▼** to highlight **DVB**.
- > Press **◀** or **▶** to switch between the settings **ON** or **OFF**.
- > Press **GO** to store the settings, or ...
- > ... press **EXIT** to leave all menus without storing.

*Important! If you have connected a Bang & Olufsen hard disc recorder to your television, it is recommended not to disable the TV tuner.*

